HOME
DECORATORS
COLLECTION

BF-25030 PROVENCE SINGLE SINK CABINET 35H×33W×22D

INV#11128

ASSEMBLY INSTRUCTIONS

Made In China

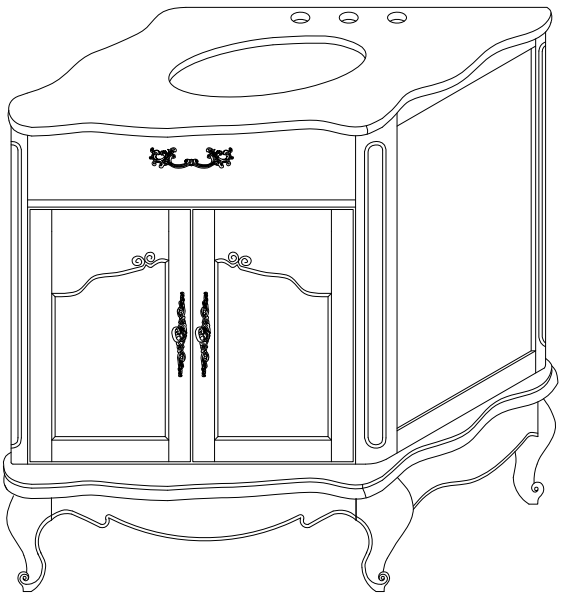

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 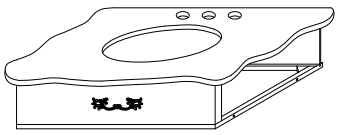 TOP FRAME-1PC	B  BOTTOM PANEL-1PC	C  LEFT SIDE PANEL-1PC
D  RIGHT SIDE PANEL-1PC	E  LEGS-4PCS	F 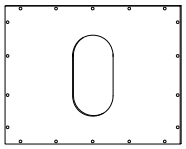 BACK PANEL-1PC
G 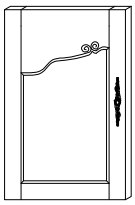 LEFT DOOR-1PC	H 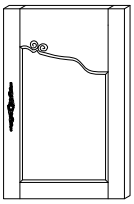 RIGHT DOOR-1PC	I  SHELF-1PC
J CAM-LOCKS-8PCS	K 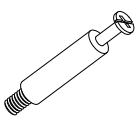 CAM-BOLTS-8PCS	L CAM-TOOL-1PC

M 7mm × 5/8"  SCREWS-2PCS	N 7mm × 5/8"  SCREWS-18PCS	O 8mm × 5/8" SCREWS-2PCS
P 11mm × 1-1/2"  SCREWS-4PCS	Q  ALLEN WRENCH-1PC	R  WASHERS-8PCS
S  FEET-4PCS	T  LARGE MAGNET-1PC	U  FEMALE MAGNETS-2PCS
V  SHELF SUPPORTS-4PCS	W 5mm × 1/2" SCREWS-2PCS	X HANDLES-2PCS
Y 13mm × 1-3/4"  SCREWS-8PCS	Z  HINGES-4PCS	A1 6mm × 1/2" SCREWS-24PCS
B1  ALLEN WRENCH-1PC		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

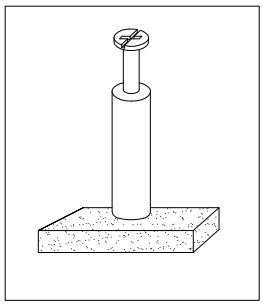

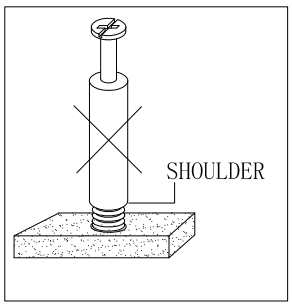

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

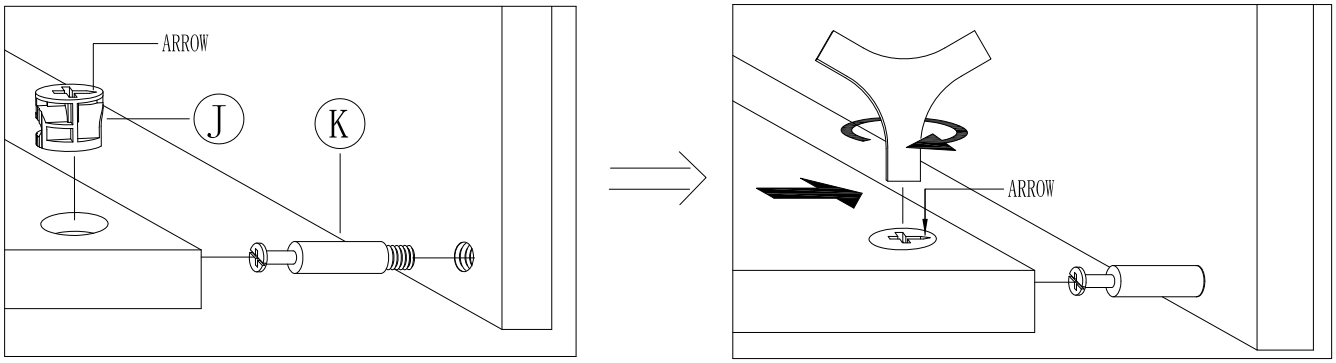

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

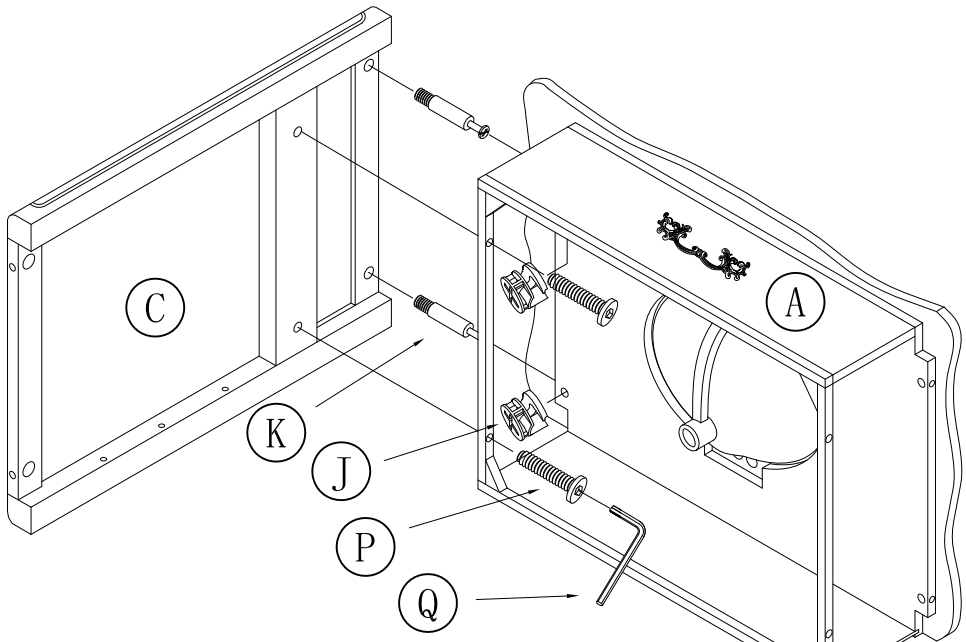

1). ASSEMBLE THE LEFT SIDE PANEL(C).

- ROTATE 2 CAM-BOLTS(K) INTO THE HOLES IN THE LEFT SIDE PANEL(C).
- PLACE CAM-BOLTS(K) INTO THE HOLES IN TOP FRAME(A) AND ATTACH USING 2 CAM-LOCKS(J).
- ROTATE 2 SCREWS(P) INTO THE HOLES IN THE TOP FRAME(A).

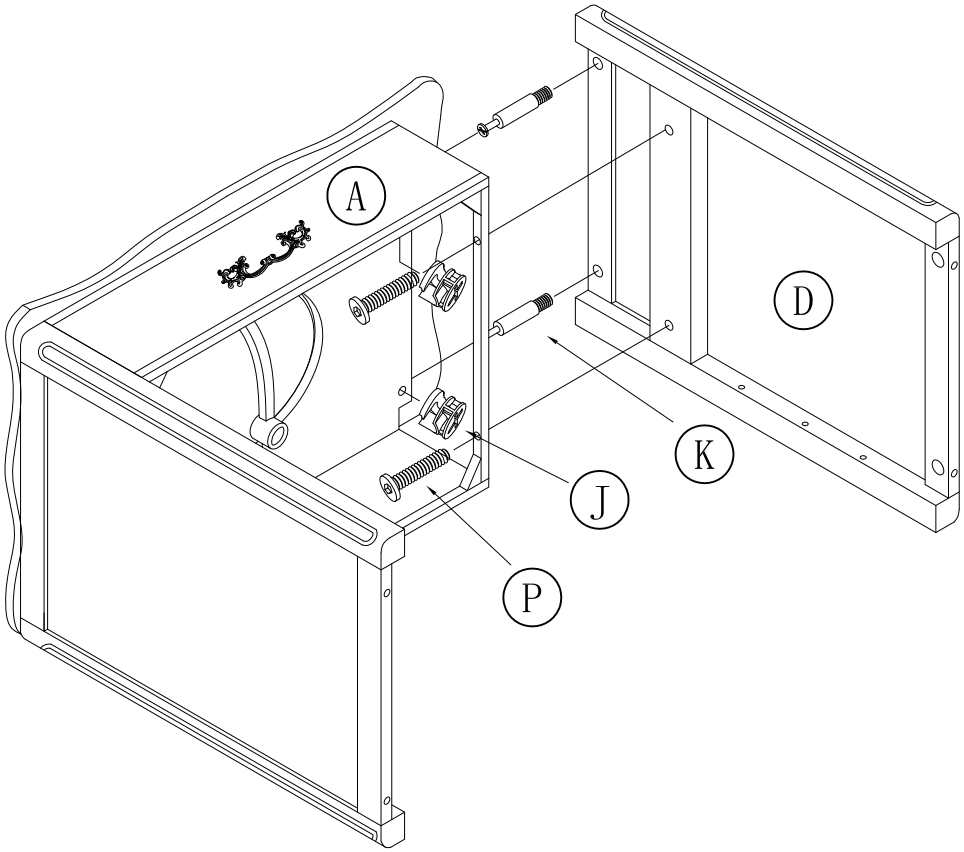

2). ASSEMBLE THE RIGHT SIDE PANEL(D).

- ROTATE 2 CAM-BOLTS(K) INTO THE HOLES IN THE RIGHT SIDE PANEL(D).
- PLACE CAM-BOLTS(K) INTO THE HOLES IN TOP FRAME(A) AND ATTACH USING 2 CAM-LOCKS(J).
- ROTATE 2 SCREWS(P) INTO THE HOLES IN THE TOP FRAME(A).

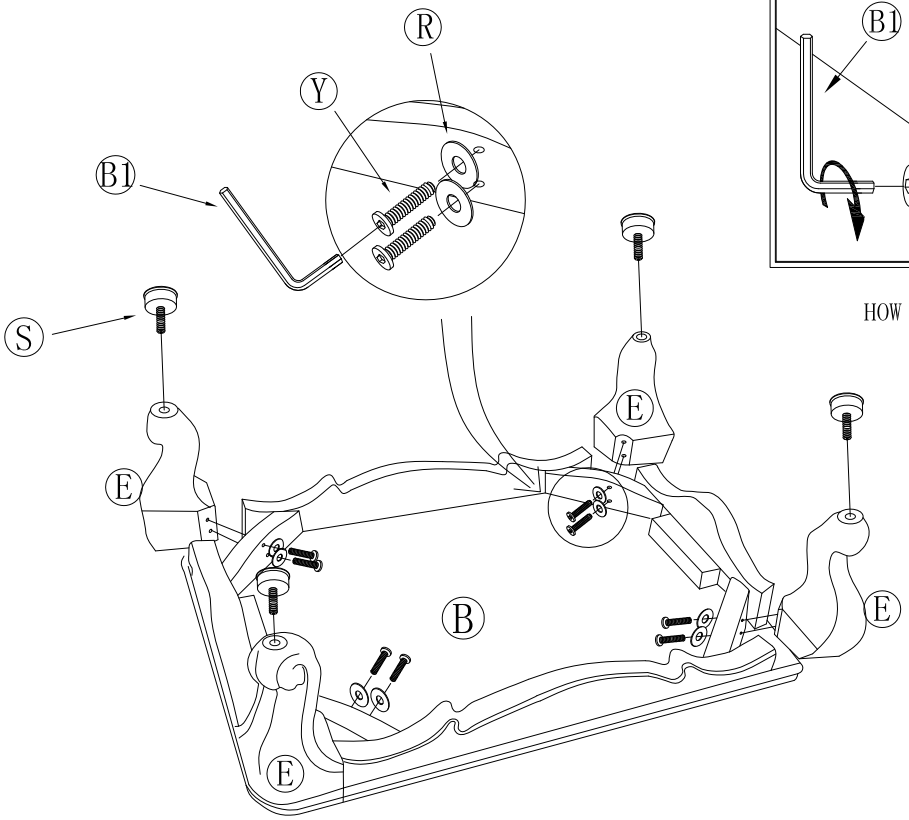

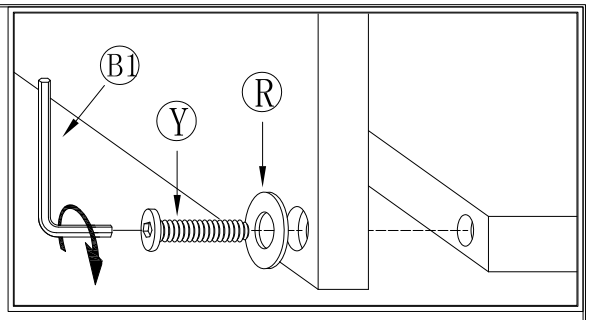

HOW TO USE THE ALLEN WRENCH

3). ASSEMBLE THE LEGS(E).

- ATTACH 4 LEGS(E) TO BOTTOM PANEL(B) USING 8 SCREWS(Y) AND 8 WASHERS(R).
- ROTATE 4 FEET(S) INTO THE HOLES IN THE LEGS(E).

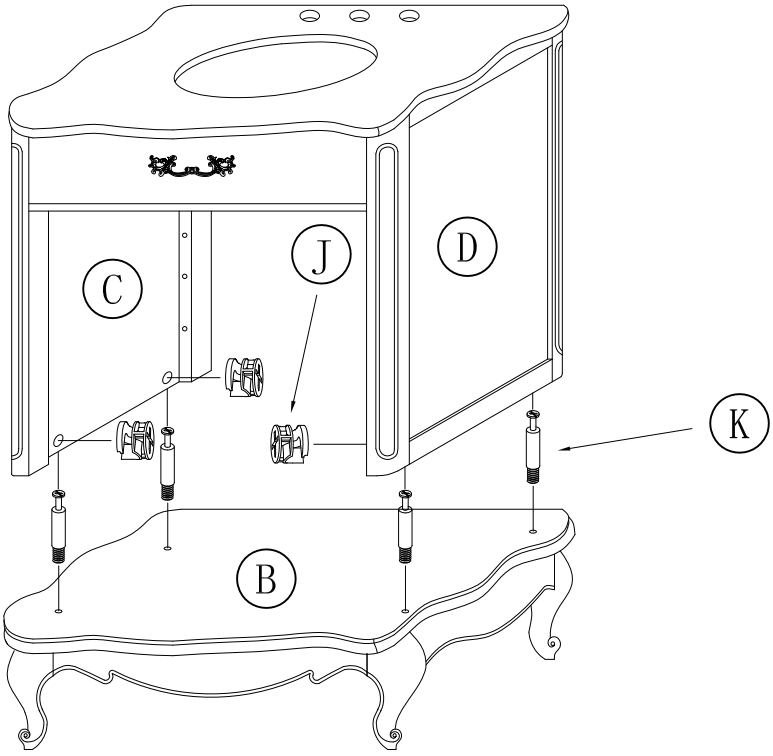

4). ASSEMBLE THE BOTTOM PANEL(B).

- ROTATE 4 CAM-BOLTS(K) INTO THE HOLES IN THE BOTTOM PANEL(B).
- PLACE CAM-BOLTS(K) INTO THE HOLES IN THE PANEL(C/D) AND ATTACH USING 4 CAM-LOCKS(J).

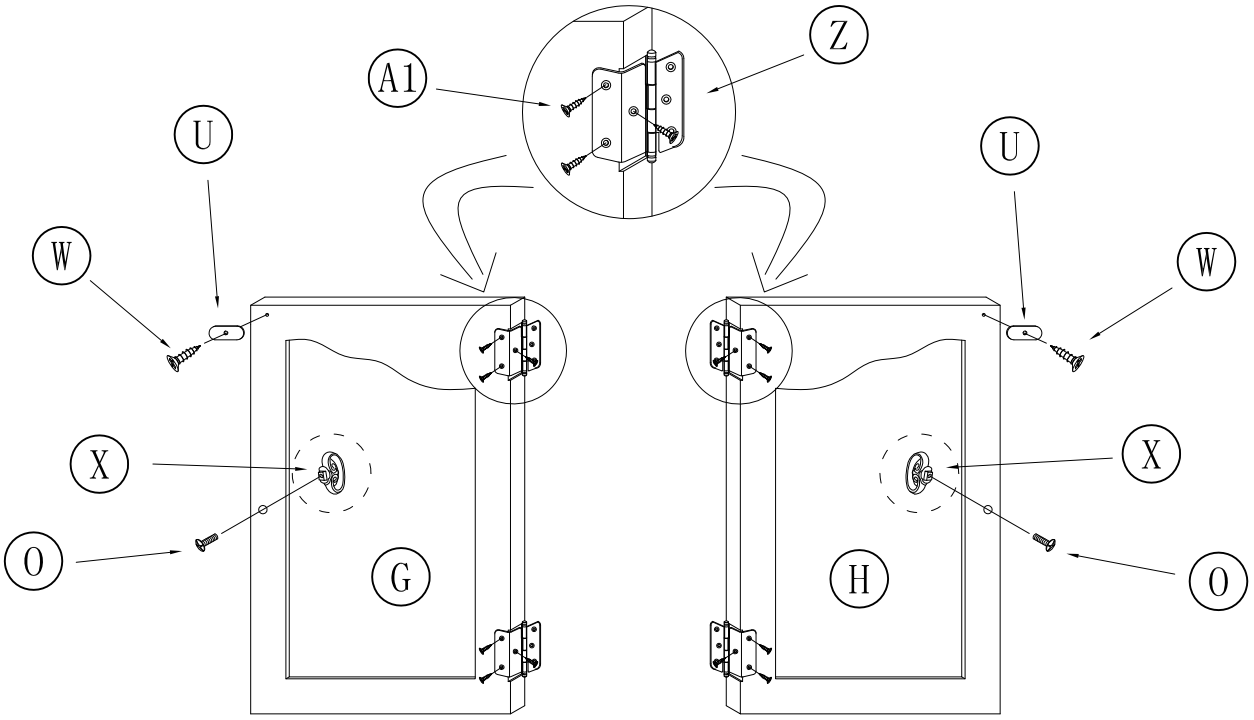

5). ASSEMBLE THE DOOR(G/H).

- ATTACH 2 HANDLES(X) TO DOOR(G/H) USING 2 SCREWS(O).
- ATTACH 2 FEMALE MAGNETS(U) TO DOOR(G/H) USING 2 SCREWS(W).
- ATTACH 4 HINGES(Z) TO DOOR(G/H) USING 12 SCREWS(A1).

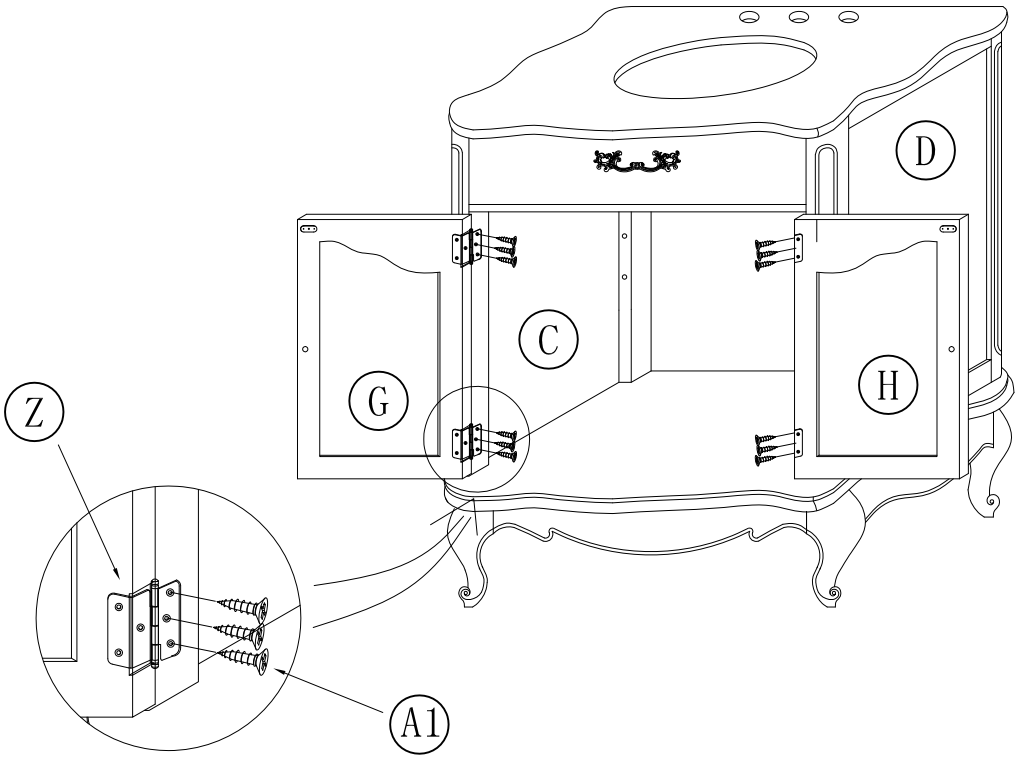

6). ASSEMBLE THE DOOR(G/H).

● ATTACH THE DOOR(G/H) TO SIDE PANEL(C/D) USING 12 SCREWS(A1).

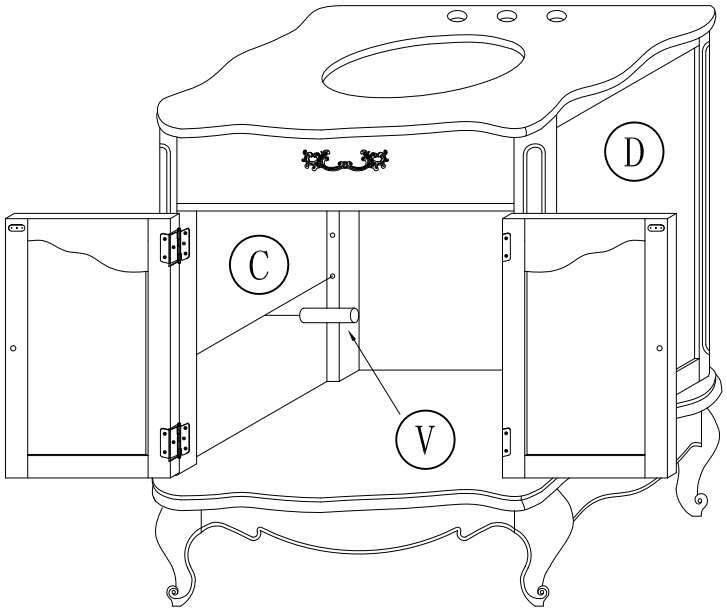

7). ASSEMBLE THE SHELF SUPPORTS(V).

● INSERT 4 SHELF SUPPORTS(V) INTO THE HOLES IN THE SIDE PANEL(C/D).

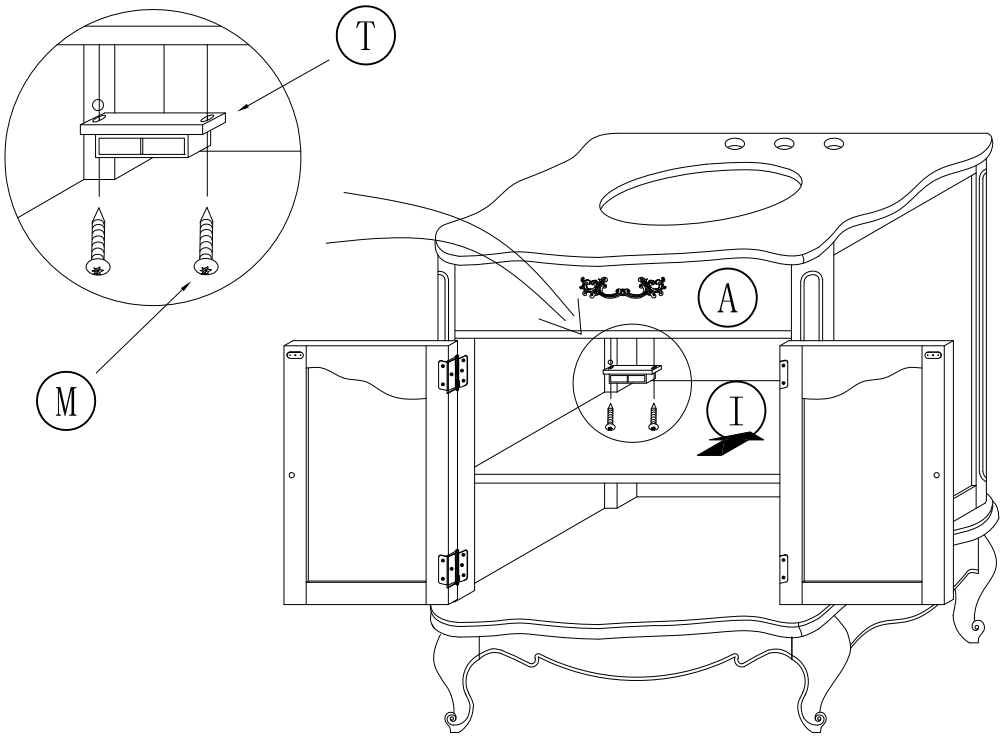

8). ASSEMBLE THE LARGE MAGNET(T) AND SHELF(I).

- ATTACH A LARGE MAGNET(T) TO TOP FRAME(A) USING 2 SCREWS(M).
- PLACE THE SHELF(I) ONTO THE SHELF SUPPORTS(V).

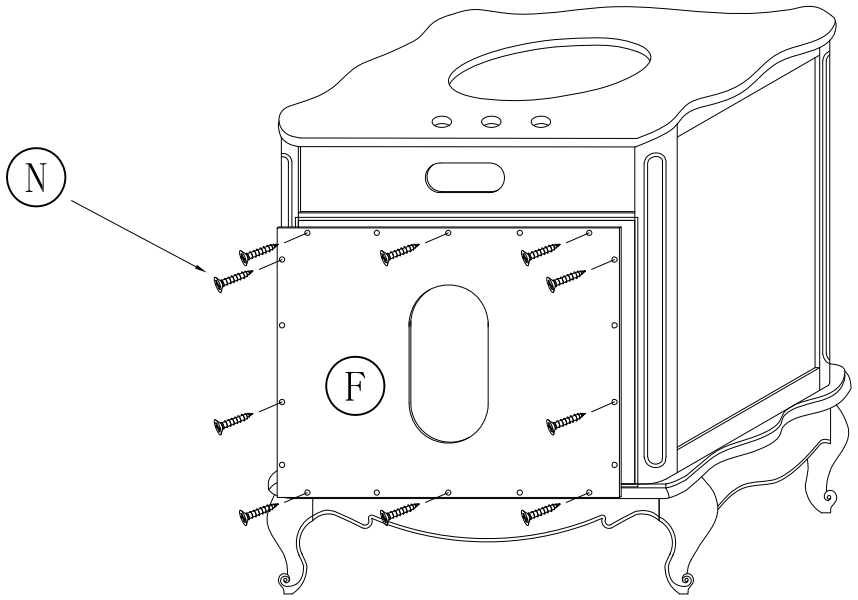

9). ASSEMBLE THE BACK PANEL(F).

- ATTACH THE BACK PANEL(F) USING 18 SCREWS(N).